

# Connect a VCR or DVD Diagram

- Connect the VCR or DVD RF output cable to the splitter located on the TV mount (see diagram).
- The splitter has two inputs: one connected to the Channel One signal feed cable and the other has been sealed with a cap.
- Remove the cap from the second input and connect your unit to it. Note: a VCR hooked to the TV in this way can play, but, not record programs.
- Replace the cap when the VCR or DVD is disconnected from the splitter to prevent signal loss. Do not tamper with the Channel One input.

**IMPORTANT NOTE:** Switch your VCR or DVD to the opposite channel of the one used to air Channel One News. For instance, if you broadcast the News on ch. 3, your player should be set to ch. 4 (the 3/4 switch is on the back of most players).

